


LED FLOOD LIGHT INSTALLATION GUIDE







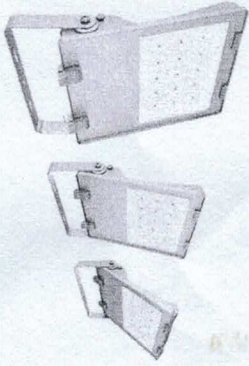


VOLTS	AC 100-240V / 277V/ 50 / 60Hz
PROTECTION CLASS	Class I (Default) / Class II
POWER FACTOR	>0.95
OPERATING TEMP.	-40°C ~ +50°C
BEAM ANGLE	25°, 60°, 90°, 110° or Asymmetrical
HOUSING	High pressure die-cast aluminum Tempered glass
HOUSING COLOR	Gray (Default) / Black (available on request)
MOUNTING	Bracket mounted
Mounting Location	Wall / Pole / Floor / Ceiling
IP RATING	IP66
IK RATING	IK10
WARRANTY	5 years

Version	Nominal Wattage W	Fixture Dimension mm	Fixture Weight kg	Packing Type units / ctn	EPA m ²
Medium	60 / 80 / 100 / 120	447 X311 X90	4.4(±0.1)	1	0.172
Large	150 / 180 / 200 / 240	495 X378 X90	6.0(±0.1)	1	0.225

BRACKET MOUNTING & CONNECTION INSTRUCTIONS

- STEP 1: Open the packaging and check the product. In case of any damage, contact us.
- STEP 2: Adjust the flood light to direct the light in the desired direction before tightening the screws.
- STEP 3: Be sure to connect the cable correctly. Brown-Live, Blue- Neutral, Yellow/Green- Ground.
- STEP 4: Switch the voltage on and check to see that the flood light works properly.
- Maintenance: Toolless open clips of the light body then replace the LED or Driver.
- Recommended torque: 1.7Nm ± 1Nm

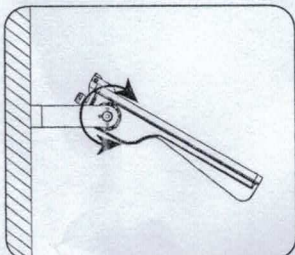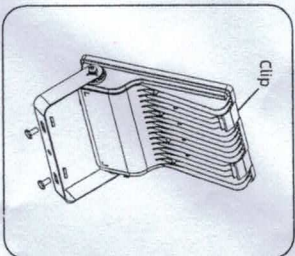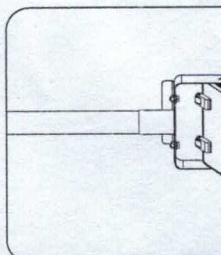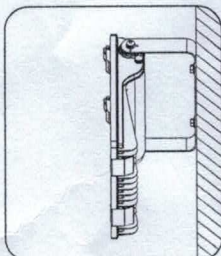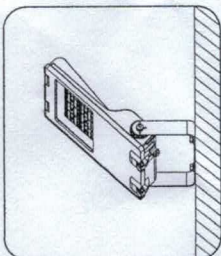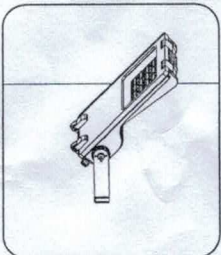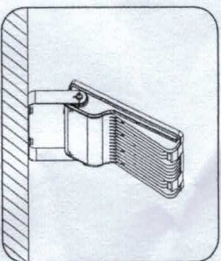

CAUTION

- Installation and maintenance must be performed by professionals only.
- Please ensure the holder is strong enough and the screws are tightened.
- The ground wire must be securely connected.
- Please make sure the lamp is working with correct input voltage.

- Cut off the power before maintenance.
- Do not use chemicals or corrosive cleaner to clean the fixture.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by qualified person in order to avoid a hazard.